



HEAT EXPERIENCE

HEATX 5V HEATING SYSTEM

USER MANUAL
BRUKSANVISNING
ANVÄNDARMANUAL
BETRIEBSANLEITUNG
KÄYTTÖOHJE
MANUEL UTILISATEUR
MANUAL DE USUARIO
MANUALE UTENTE
MANUAL DO USUÁRIO

IMPORTANT INSTRUCTIONS, RETAIN FOR FUTURE USE

Important instructions. Read before use.
Retain for future use.

 
Read all information following this product before you start using it.

In addition to this document, you should find:

- safety instructions
- powerbank manual

VESTS, JACKETS AND SWEATERS

EN

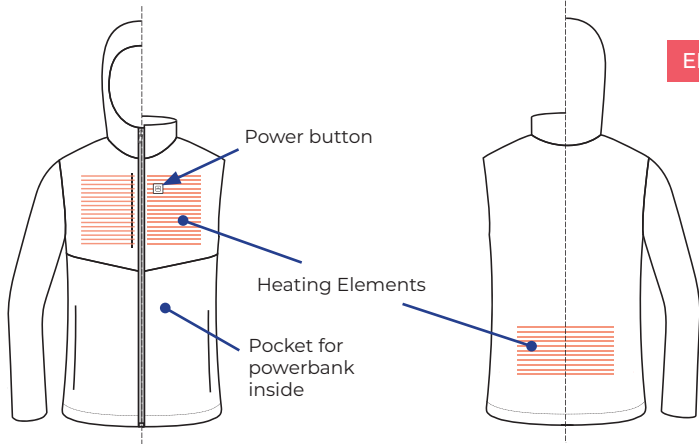


SIT PAD

Power button

Three heating levels



Pocket for powerbank

 Connection cable inside

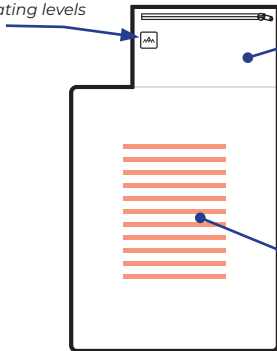

Heating element
On top of padding

  1. CHARGE POWERBANK

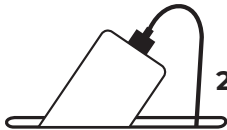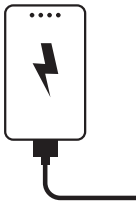

2. CONNECT POWERBANK

-avoid excessively bending the cables when placing the powerbank in the pocket



3. HOLD BUTTON 5 SEC. TO TURN ON (AND OFF)

4. PRESS POWER BUTTON TO SWITCH BETWEEN HEATING LEVELS



LOW



MEDIUM



HIGH



BEFORE USE

Congratulations on your new Heat Experience product.
Before you start using it, there are some things you should know.

EN

The battery should be fully charged before first use.
Make sure the charger you are using meets the powerbank's specifications. It should at least supply 2A for efficient charging.
Using a charger with a lower output will result in slower charging times.

Always use a certified charger to avoid damaging the powerbank or causing safety issues.

Always unplug the charger once it's fully charged to prolong the lifespan of the battery.

And remember: Do NOT charge unattended.

We recommend that you get to know how the product works before you head out on longer adventures.

GETTING STARTED

Connect the powerbank to the cable in your product, before inserting it into the pocket.

Press and hold the power button for ~5 seconds, until the light turns on. The heating system goes directly to the HIGH heating level. Our suggestion is to keep the heat on HIGH until you feel the warmth, and then adjust it down to MEDIUM or LOW.

Press the button to switch between the three heating levels depending on your need for warmth. The colour of the light will change to indicate the heating level.

HEATING LEVELS GARMENTS

EN

Level	Temperature*	Light	Duration* 5.000 mAh	Duration* 10.000 mAh
LOW	~30°C	 / 	~3 hours	~5 hours
MEDIUM	~35°C	 / 	~2 hours	~3 hours
HIGH	~40°C	 / 	~1,5 hours	~2 hours



*This product is designed to work with 5V 2,1A powerbanks. Any other type of powerbank might cause a lower temperature output, or no function at all.

*The duration and given temperature will vary depending on ambient temperature and conditions.

*A powerbank that is cold when started will have shorter run time.

HEATING LEVELS SIT PAD

Level	Temperature*	Light	Duration*
LOW	~30°C		~4,5 hours
MEDIUM	~33°C		~2,5 hours
HIGH	~37°C		~2 hours



*Duration based on using a 5.000mAh powerbank.

*This product is designed to work with 5V 2,1A powerbanks.

Any other type of powerbank might cause a lower temperature output, or no function at all.

*The duration and given temperature will vary depending on ambient temperature and conditions.

*A powerbank that is cold when started will have shorter run time.

CARE AND MAINTENANCE

Before washing the garment, remember to remove the powerbank and close all pockets. Follow the instructions on the care label, to ensure maximum lifespan of your heated product.

Hang dry the garment with the usb cable hanging freely. If your product has a rubber cap for the connection plug, remove the cap after washing to let the connection dry properly before use.

EN

Allow to dry after use, and store the product disconnected from powerbank and charger.

The powerbank **must be maintenance charged** to avoid deep discharge. Deep discharge causes irreversible damage to the battery cells and a significant reduction in battery life. In worst case, the battery may stop working. In case of long-term storage or no use, the powerbank should be charged regularly, every 2 - 3 month is recommended to maintain maximum battery life and to avoid deep discharge. Charge the powerbank to 50-80% capacity before storage. Check charge status every three months, recharge to 50-80% if needed.

CONTACT

Do you have any more questions, feel free to reach out;

Contact info:

Heatexp AS
Østre Rosten 102b
7075 Tiller, NORWAY

Norwegian customers:

+4773848210

support@heatx.no

heatexperience.no

EU customers:

+31 30 2001153

support@heatx.eu

heatexperience.eu

Follow us on social media:

facebook.com/theheatexperience

Instagram: Heat Experience

We hope you enjoy your product.

 
Kind regards, The Heat Experience Team.

Viktige instruksjoner. Les før bruk. Behold for fremtidig bruk.


Les all informasjon som følger med dette produktet
før du tar det i bruk.

I tillegg til dette dokumentet finner du vedlagt:
-sikkerhetsinstruksjoner
-bruksanvisning for powerbank

VEST, JAKKE OG GENSER


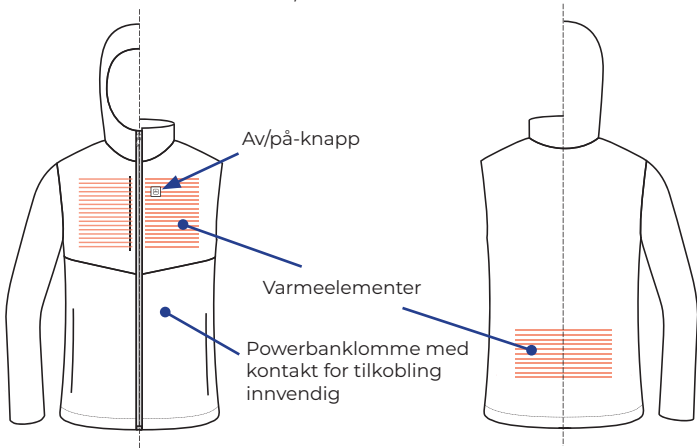


SIT PAD

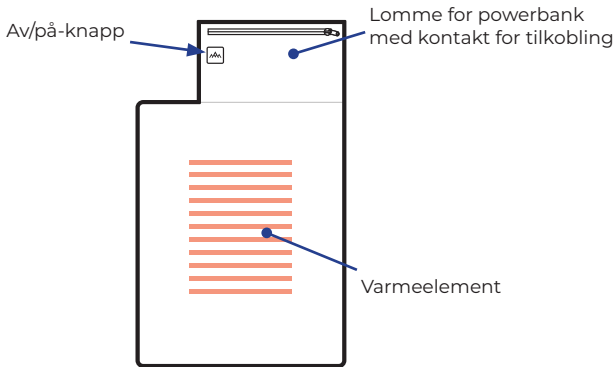 

NO

  1. LAD POWERBANK

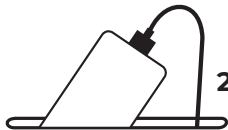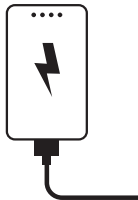

2. KOBLE TIL POWERBANK

-unngå å brette/strekke kablene overdrivent ved plassering i lommen.



3. HOLD KNAPP INNE I 5 SEK. FOR Å SLÅ PÅ (OG AV)

4. TRYKK FOR Å SKIFTE MELLOM VARMENIVÅER

NO



LAV



MEDIUM



HØY



FØR BRUK

Gratulerer med ditt nye Heat Experience plagg.
Før du tar produktet i bruk er det noen ting du bør vite.

Batteriet bør være fullt ladet før første bruk.
Sørg for at laderen du bruker oppfyller powerbankens spesifikasjoner. Den bør minst levere 2A for effektiv lading. Bruk av en lader med lavere strømstyrke vil føre til langsommere lading. Bruk alltid en sertifisert lader for å unngå å skade powerbanken eller forårsake sikkerhetsproblemer.
Koble alltid fra laderen når den er fullt ladet for å forlenge batteriets levetid.

Og husk: batterier skal aldri lades uten oppsyn.

Vi anbefaler at du gjør deg kjent med produktet før du drar ut på lengre turer.

KOM I GANG

Koble powerbanken til kabelen i produktet ditt, og lukk glidelåsen.

Forsøk å ikke strekke eller bøye kabelen og kontakten unødig, da dette på sikt kan føre til skade på powerbank eller kontakt.

Hold knappen på varmesystemet inne i ca 5 sekunder for å slå på varmen. Når du slår på systemet vil det automatisk starte på HØY varme. Vi foreslår å beholde den på HØY til du kjenner varmen, for så å velge MEDIUM eller LAV.

Du velger mellom varmenivåene ved å trykke på knappen.

NO

VARMENIVÅ BEKLEDNING

Varmenivå	Temperatur*	Lys	Batteritid* 5.000 mAh	Batteritid* 10.000 mAh
LAV	~30°C	 / 	~3 timer	~5 timer
MEDIUM	~35°C	 / 	~2 timer	~3 timer
HØY	~40°C	 / 	~1,5 timer	~2 timer

 *Dette produktet er utviklet for å benytte 5V 2,1A powerbank. Ved bruk av annen type powerbank vil temperaturen kunne bli lavere, eller varmesystemet vil eventuelt ikke fungere i det hele tatt.

*Varighet og temperaturer vil variere avhengig av temperaturen til omgivelsene.

*En powerbank som er kald når den starter vil ha betydelig forkortet levetid.

VARMENIVÅ SITTEUNDERLAG

Varmenivå	Temperatur*	Lys	Batteritid*
LAV	~30°C		~4,5 hours
MEDIUM	~33°C		~2,5 hours
HØY	~37°C		~2 hours

NO



*Varighet er basert på bruk av en 5.000mAh powerbank.

*Dette produktet er utviklet for å benytte 5V 2,1A powerbank. Ved bruk av annen type powerbank vil temperaturen kunne bli lavere, eller varmesystemet vil eventuelt ikke fungere i det hele tatt.

*Varighet og temperaturer vil variere avhengig av temperaturen til omgivelsene.

*En powerbank som er kald når den starter vil ha betydelig forkortet levetid.

VEDLIKEHOLD OG BRUK

Før du vasker plagget må du ta ut powerbanken og lukke alle lommer. Følg vaskeinstruksjonene for å sikre lengst mulig levetid. La plagget tørke hengende. Om kontakten har gummideksel fjerner du dette før du henger plagget til tørk, og lar kontakten henge fritt slik at den får tørke godt før bruk.

La plagget tørke og varmesystem kjøle seg ned etter bruk før du legger det bort. Koble alltid powerbank fra når produktet ikke er i bruk.

Powerbank **må vedlikeholdslades** jevnlig for å unngå dyputlading, som kan gjøre uopprettelig skade på battericellene, og betydelig redusere batterilevetiden. I verste fall kan powerbanken slutte å virke.

Dersom powerbank skal lagres over lengre tid, bør den vedlikeholdslades hver 2.-3. måned for å opprettholde maksimal batterilevetidd og unngå dyputlading. Vedlikeholdslading utføres ved å lade powerbank til 50-80% før det legges bort for lagring. Sjekk ladestatus hver 3. måned. Om nødvendig lades den opp til 50-80% igjen .

KONTAKT

Om du har spørsmål, ta gjerne kontakt:

Heatexp AS
Østre Rosten 102b
7075 Tiller, NORWAY

NO

Norwegian customers:

+4773848210

support@heatx.no

heatexperience.no

EU customers:

+31 30 2001153

support@heatx.eu

heatexperience.eu

Følg oss på sosiale media:

facebook.com/theheatexperience

Instagram: Heat Experience

Vi håper du liker produktene våre.

Med vennlig hilsen, The Heat Experience Team.

SE) För att ladda ner den här bruksanvisningen på ett annat språk, besök
heatx.eu/support

(FI) ladataksesi tämän käyttöoppaan muilla kielillä, käy osoitteessa
heatx.eu/support

DE) Um dieses Benutzerhandbuch in anderen Sprachen herunterzuladen,
besuchen Sie bitte heatx.eu/support

NL) om deze gebruikershandleiding in andere talen te downloaden, ga
naar heatx.eu/support

FR) pour télécharger ce manuel d'utilisation dans d'autres langues, veuillez
visiter heatx.eu/support

ES) para descargar este manual de usuario en otros idiomas, visite heatx.eu/support

(IT) per scaricare questo manuale utente in altre lingue, visitare il sito
heatx.eu/support