



HEATX HEATED APP CONTROLLED INSOLES

USER MANUAL
BRUKSANVISNING
ANVÄNDARMANUAL
BETRIEBSANLEITUNG
KÄYTTÖOHJE
MANUEL UTILISATEUR
MANUAL DE USUARIO
MANUALE UTENTE
MANUAL DO USUÁRIO



IMPORTANT INSTRUCTIONS, RETAIN FOR FUTURE USE

Important instructions. Read before use.
Retain for future use.

Read all information following this product before you start using it.

In addition to this document, you should find:
-safety instructions

INSOLE OVERVIEW

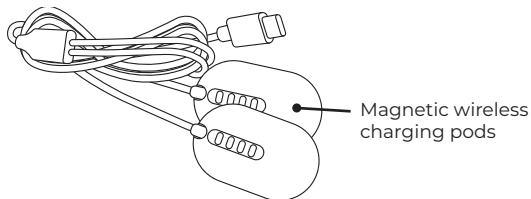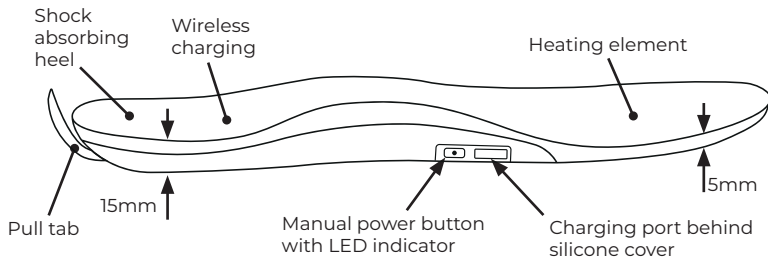

BEFORE USE

Congratulations on your new Heat Experience Heated Insoles. Before you start using them there are some things you should know.

The Heated Insoles must be fully charged before first use, or after a long period (3 months or more) of no use.

Charging can be done either wireless or by cable.

Wireless charging

Connect the wireless charging pods to a power supply (5V/2A).

Place the pods on the insoles. Let the magnets align the pods correctly with the insoles.

Flashing LEDs indicates the insoles are charging.

When all LEDs are constantly on the insoles are fully charged.

Cabled charging

Connect both insoles to the USB cable, and connect it to a power supply (5V/2A).

The LED lights at the side of the insoles shows the charging status:


- when the red light flashes, it means that the battery power is 0-33%.
- when the yellow light flashes, it means that the battery power is 34%-66%.
- when the green light flashes, it means that the battery power is 67%-99%.
- when the light stop flashing and the green light is on, the insoles are fully charged.

Charging takes about 4-6 hours.

Do not charge unattended.

Do not leave charger in wall, or leave insoles charging longer than 5-6 hours.

Place magnetic wireless charging pods at heel area. When the LEDs start blinking the insoles are charging.

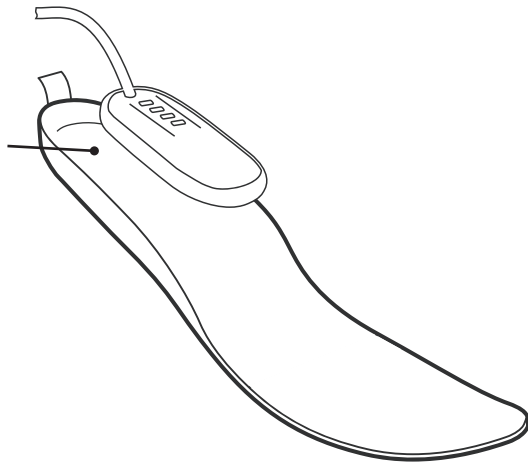


If possible, turn on the insoles while indoors (in a warmer environment), this will help to protect the battery against getting cold, and prolong battery life.

For the best effect, turn on the heat before you get cold.

Insoles can be tailored to your size, within the cutlines marked on the sole. Do not cut inside the inner marked line, this can result in damaging the heating system. Such damage is not covered by the warranty.

Remember to remove the shoes' original insoles before inserting the Heat Experience Heated insoles.

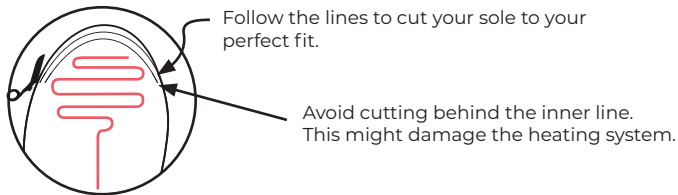

MANUAL MODE

The insoles can be used both in manual mode, or with the Heat Experience APP.

Manual mode:

Turn on/off: Long press the button at the side of the insoles to turn on/off.

Change the heating level: Short press the button at the side of the insoles to change the temperature.

High Level - Red

Med Level – Yellow

Low Level – Green

APP CONTROL MODE

EN

Download the APP

“Open the App Store(iPhone) or Play Store (Android Phone) depending on your device.

“Search for “Heat Experience” and download the app.

Make sure insoles are on. Long press (about 3 seconds) the button at the side of the insoles to turn on.

Press the + under “add new product”.

(if you already have other products registered in the app you need to swipe sideways to find the “add new product”.

Press “PAIR” - Press “NEXT” - Press “PAIR” - Press “DONE”

You can now adjust the heating level by sliding the red indicator line up or down the temperature bar.

Pressing the lock symbol you can choose to adjust both insoles either separately or together.

The battery symbols show the battery status.

Turn off/on using the power symbol at the bottom of the temperature bars.

Note:

When the insoles are powered off using the APP it will be in standby mode, to be able to power-up again when asked to. In standby mode the LED on the side of the inside are blinking slowly.

When storing the insoles for longer time turn, turn off by long pressing the button on the side of both insoles until the LEDs turns off completely.

If you experience issues with the app control, tap the gear icon in the top left of the app, select the insoles in the menu, and choose "disconnect." The insoles are now disconnected from the app. Try pairing them again.

Scan this code
with your
mobile phone to
download the app.



HEATING LEVELS

Level	Temperature*	Indicator light (at side of insole)	Duration*
I	~35°C	green	~10 hours
II	~40°C	yellow	~5 hours
III	~45°C	red	~3 hours



The given temperatures and lifetimes are estimates only. Battery lifetime and temperature will vary depending on the ambient temperature, moisture and the shoes insulation values.

MAINTENANCE AND USE

To avoid deep discharge the soles needs to be maintainance charged. Deep discharge will reduce the lifetime of the battery significantly, result in permanent damage, or even result in a dead insole.

The insoles should be charged every 2 to 3 months if not in use, to prolong lifetime. For long term storage, charge the insoles to about 50-80% and shut them off for ideal battery preservation. Repeat discharge and recharge to 50-80% every 2-3 months. Store in a cool and dry place, between 5°C to 20°C.

Avoid draining the battery completely too often, as repeated discharges will shorten its lifespan.

You can charge the insoles with any 5V/2A USB chargers, including powerbanks. Do not charge unattended.

Do not excessively bend the insoles. This may cause damage to the heating elements. Be careful when installing the insoles in your shoes.

To clean your insoles, use a cloth and wipe them off. The insoles are not waterproof. Only air dry the insoles. Do not place on radiators or other hot surfaces.

Battery Voltage	3.7 V
Battery Capacity	1800 mAh
Battery cells	Polymer Li-ion battery
Battery case	Stainless steel
Heating wire	Silicone wrapped composite fiber
Remote Control's Transmitting Frequency	2.4GHz

CONTACT

Do you have any more questions, feel free to reach out;

Contact info:

Heatexp AS
Østre Rosten 102b
7075 Tiller, NORWAY

Norwegian customers:

+4773848210

support@heatx.no

heatexperience.no

EU customers:

+31 30 2001153

support@heatx.eu

heatexperience.eu

Follow us on social media:

facebook.com/theheatexperience

Instagram: Heat Experience

We hope you enjoy your product.

Kind regards, The Heat Experience Team.

Viktige instruksjoner. Les før bruk. Behold for fremtidig bruk.

Les all informasjon som følger med dette produktet
før du tar det i bruk.

I tillegg til dette dokumentet finner du vedlagt:
-sikkerhetsinstruksjoner

FØR BRUK

Gratulerer med dine nye Heat Experience varmesåler! Før du begynner å bruke dem, er det noen ting du bør vite.

Varmesålene må være fulladet før første bruk, eller etter en lengre periode (3 måneder eller mer) uten bruk.

Lading kan gjøres enten trådløst eller med kabel.

Trådløs lading

Koble de trådløse ladepoddene til en strømkilde (5V/2A).

Plasser poddene på sålene. La magnetene posisjonere poddene riktig.

Blinkende LED-lamper indikerer at sålene lades.

Når alle LED-lampene lyser kontinuerlig, er sålene fulladet.

Lading med kabel

Koble begge sålene til USB-kabelen, og koble den til en strømkilde (5V/2A).

LED-lampene på siden av sålene viser ladestatus:

- Når det røde lyset blinker, betyr det at batterinivået er 0-33%.
- Når det gule lyset blinker, betyr det at batterinivået er 34%-66%.
- Når det grønne lyset blinker, betyr det at batterinivået er 67%-99%.
- Når lyset slutter å blinke og det grønne lyset lyser, er sålene fulladet.


Lading tar ca. 4-6 timer.

Hvis mulig, slå på sålene mens du er innendørs (i et varmere miljø), da dette vil hjelpe med å beskytte batteriet mot kulde og forlenge batterilevetiden.


For best effekt, slå på varmen før du blir kald.

Sålene kan tilpasses din størrelse innenfor linjene merket på sålen. Klipp ikke innenfor den innerste merkede linjen, da dette kan føre til skade på varmesystemet. Slike skader dekkes ikke av garantien.

Husk å fjerne de originale sålene i skoene før du setter inn Heat Experience varmesåler.

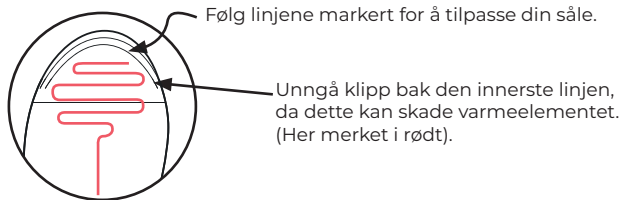

Plasser den magnetiske
ladepodden i hel området.
Når den er plassert riktig
vil LED lampene begynne
å blinke.

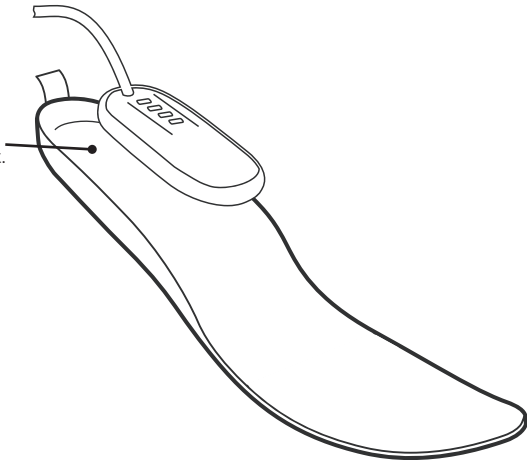

MANUELL STYRING

Sålene kan kontrolleres både manuelt, eller med APP.

Manuell kontroll:

Trykk og hold knappen på siden av sålene for å slå sålene på eller av.

Trykk kort på knappen på siden av sålene for å endre temperaturen.

Høyt nivå – Rød

Middels nivå – Gul

Lavt nivå – Grønn

BRUK MED APP

Åpne App Store (iPhone) eller Play Store (Android-telefon) avhengig av enheten din. Søk etter «Heat Experience» og last ned appen.

NO

Sørg for at sålene er på. Trykk og hold på knappen på siden av sålene (ca. 3 sekunder) for å slå dem på.

Trykk på **+** under «legg til nytt produkt».

(Hvis du allerede har andre produkter registrert i appen, må du sveipe til siden for å finne «legg til nytt produkt».)

Trykk på «PAIR» - Trykk på «NEXT» - Trykk på «PAIR» -Trykk på «DONE»

Du kan nå justere varmenivået ved å skyve den røde indikatorlinjen opp eller ned på temperaturfeltet.

Ved å trykke på lås-symbolet kan du velge å justere sålene enten separat eller sammen.

Batterisymbolene viser batteristatusen.

Slå av/på ved å bruke strøm-symbolet nederst på temperaturfeltet.

Merk:

Når sålene er slått av via appen, vil de være i standby-modus, for å kunne slå seg på igjen når det blir bedt om. I standby-modus vil LED-lampen på siden av sålene blinke sakte.

Når du oppbevarer sålene i lengre tid, slå dem av ved å trykke og holde knappen på siden av begge sålene til LED-lampene slår seg helt av.

Om du opplever problemer med APP styring. Trykk på tannhjulet oppe til venstre i appen, velg sålene i menyen, velg “disconnect”. Sålene er nå koblet fra appen. Prøv nå å pare på nytt.

Scan denne koden for å laste ned
Heat Experience APP



VARMENIVÅ

Nivå	Temperatur*	Indikatorlys (på siden av sålene)	Batteritid*
I	~35°C	Grønt	~10 timer
II	~40°C	Gult	~5 timer
III	~45°C	Rødt	~3 timer



De angitte batteritider og temperaturer er målt i romtemperatur. Batteritid og temperatur vil variere avhengig av temperaturen til omgivelsene, fukt og isolasjonsevnene til skoene som brukes.

VEDLIKEHOLD OG BRUK

Sålene må vedlikeholdlades for å unngå dyputlading. Dette medfører irreversibel skade på battericellene og betydelig reduksjon av batteriets levetid.

Ved lengre tids lagring eller opphold i bruk bør sålene lades jevnlig, hver 2.-3. måned anbefales for å opprettholde maksimal batterilevetid, og for å unngå dyputlading. Lad sålene til omtrent 50-80% og slå sålene av før lagring. Lad ut og gjenta hver 2.-3. måned. Lagre sålene på et tørt sted med temperatur mellom 5°C - 20°C.

Unngå å tømme batteriet helt for ofte, da gjentatte fullstendige utladinger vil forkorte levetiden.

Sålene lades med 5V/2A USB ladere, for eksempel powerbank eller USB-uttak i bil eller pc. Lad aldri uten oppsyn.

Overdreven bøyning av sålene kan skade varmeelementene. Vær varsom ved installasjon av varmesålene i sko.

Sålene kan rengjøres med en lett fuktet klut. NB: Sålene er ikke vanntette, og bør ikke bli gjennomvåte. Bør kun lufttørkes. Må ikke plasseres på varme overflater som panelovner eller lignende for tørking.

Batteri volt	3.7 V
Batterikapasitet	1800 mAh
Battericeller	Polymer Li-ion
Batteriinnfatning	Rustfritt stål
Varmetråd	Komposittfiber med silikonstrømpe
Frekvens fjernkontroll	2.4GHz

KONTAKT

Om du har spørsmål, ta gjerne kontakt:

Heatexp AS
Østre Rosten 102b
7075 Tiller, NORWAY

Norwegian customers:

+4773848210

support@heatx.no

heatexperience.no

EU customers:

+31 30 2001153

support@heatx.eu

heatexperience.eu

Følg oss på sosiale media:



facebook.com/theheatexperience

Instagram: Heat Experience

Vi håper du liker produktene våre.

Med vennlig hilsen, The Heat Experience Team.

OVERSIKT

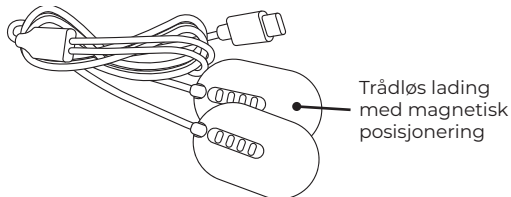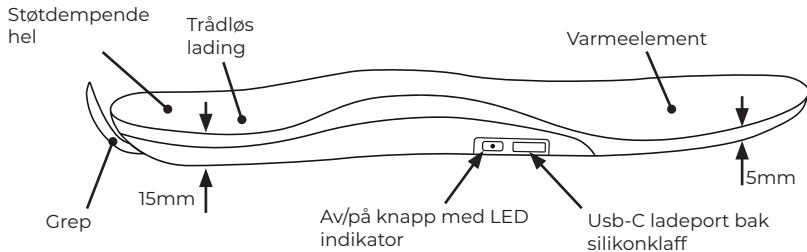

- (SE) För att ladda ner den här bruksanvisningen på ett annat språk, besök
heatx.eu/support
- (FI) ladataksesi tämän käyttöoppaan muilla kielillä, käy osoitteessa
heatx.eu/support
- (DE) Um dieses Benutzerhandbuch in anderen Sprachen herunterzuladen, besuchen Sie bitte heatx.eu/support
- (NL) om deze gebruikershandleiding in andere talen te downloaden, gaat u naar heatx.eu/support
- (FR) pour télécharger ce manuel d'utilisation dans d'autres langues, veuillez visiter heatx.eu/support
- (ES) para descargar este manual de usuario en otros idiomas, visite heatx.eu/support
- (IT) per scaricare questo manuale utente in altre lingue, visitare il sito heatx.eu/support